



# C 0871 Coaxial Ceiling Speaker

## Fitting Instructions

1. Use the template provided to cut the hole in the wall or ceiling.
2. Remove the grille using the swing arm blocks to push the metal mesh out of place. Remove evenly to avoid damage to the grille.
3. Adjust screws so that the swing arm is rotated and does not protrude from the sides.
4. Push frame into the hole in the wall or ceiling.
5. Screw the four screws up firmly in the front of the speaker.
6. To make sure the mesh grille does not fall off (particularly if the speaker is ceiling mounted ), put the black bitumen compound into the groove that the mesh slides into.

## Specifications

Power Input .....	35W RMS, 80W Max
Impedance .....	8 Ohm
Sensitivity .....	90dB, 1W @ 1m
Frequency Response .....	50Hz - 20kHz
Crossover Frequency.....	2.5kHz
Dimensions (mm).....	≈ 304L x 223W x 88D
Colour .....	White
Tweeter .....	25mm Neodymium/titanium dome tweeter
Woofers .....	165mm Polymica core foam edge woofer with 284gm magnet

\* Note Specifications may change without notice

**Not field serviceable:** For repair contact Altronics for your nearest Service Centre :

**Altronic Distributors Pty. Ltd. Perth W.A. 6000**

**Phone:** 1300 780 999 **Fax:** 1300 790 999

Please retain your receipt or invoice as proof of purchase.

