Connecting using a LAN adapter

1. Insert the XportDirect TCP/IP adapter into the CS Controller. Connect the device to the LAN. Power on the controller.



- 2. By default the XportDirect is set to auto DHCP. It will automatically connect to the network and be assigned a IP address by the network.
- In the Evolution go to the Location (Hardware/Locations) and select IP Connection and select Auto Find.
 Evolution will now automatically connect to the device.
 That's it. Your done.

etup Wizard: Enter Loca	tion Name and it's Connection Type	×
Location Name: Locatio	ni	
Connection Type C COM PORT C MODEM C DIRECT IP CONNECTION	ON	
Parameters Type	Port 10001	
C DNS C TP C Auto Find IP		
Cancel	Prev Next	



- Install the included Lantonix Device Installer software on the configuration PC. <u>http://www.lantronix.com</u>
- 3. The Device Installer software will now automatically display the XportDirect.

Lantronix DeviceInstaller 4.2.0.3						
File Edit View Device Tools Help						
🔾 Search 🤤 Exclude 🔌 Assign IP 👝						_
Lantronix Devices - 1 device(s) Section 2 (192.168) Area Connection 2 (192.168) XPort	Туре	Name	Group	IP Address	Hardware Address	Statu
	Service 2 Servic			192.168.1.5	00-20-4A-A8-06-00	Online

4. Double click on the device and use the 'Web Configuration' tool to configure the device. Configure the XportDirect as required.

(Default username is 'Admin' with no password)

Set the IP Address, Subnet Mask and Gateway as required.



Ethernet Configuration