


ACTIVOR® Wiegand Receiver RRW01 & RRW02

Memory Reset Instruction

Revised March 2018

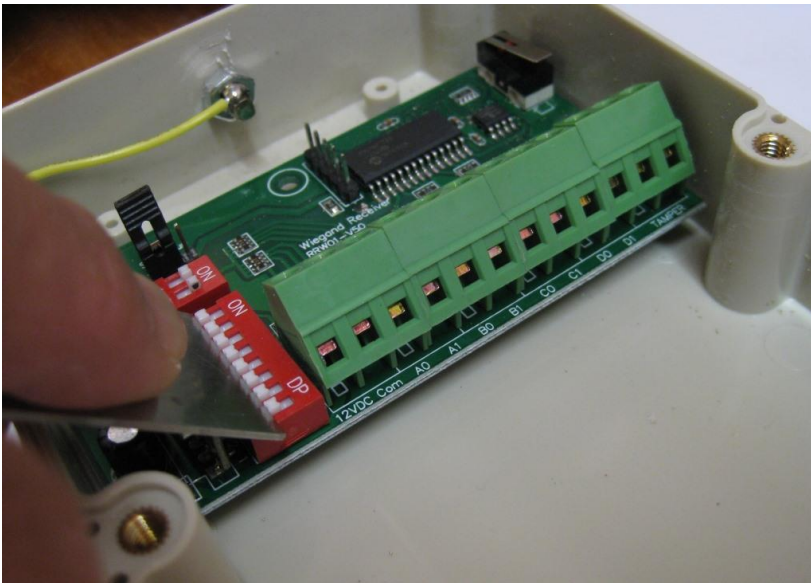

1. Push up all 2-way DIP switches to ON position
2. Push up all 8-way DIP switches simultaneously to ON position and then very quickly (within 2 seconds) push back them simultaneously to OFF position
3. LEDs flash 4 times
4. Please wait. In around 20 seconds, LEDs flash 7 times. Done.
5. Push back all 2-way DIP switches to original OFF position – go back to normal operation.

Please note:

If LEDs do not flash in step 3 please repeat step 2.

All ACTIVOR Wiegand remotes are auto-learned into the receiver. After the memory is cleared, the receiver will continuously work with the existing and new remotes.