

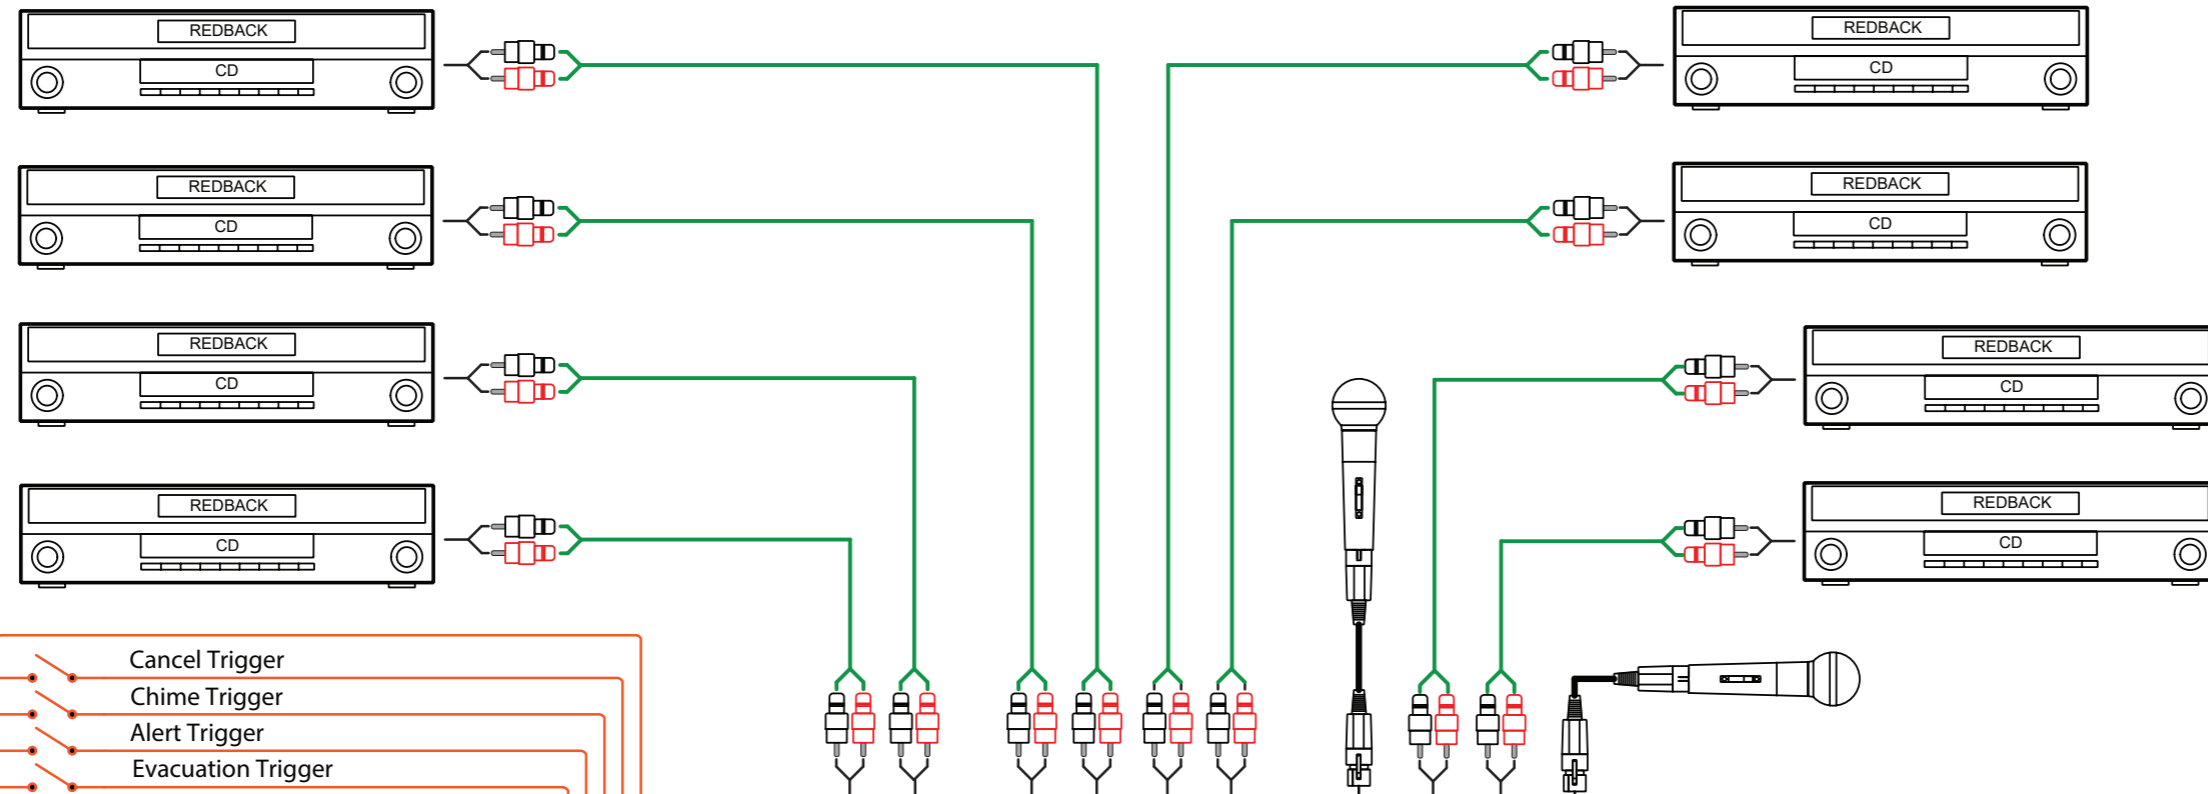


Redback® A 4480B 8 Input to 8 Output Audio Switcher - Connection Guide

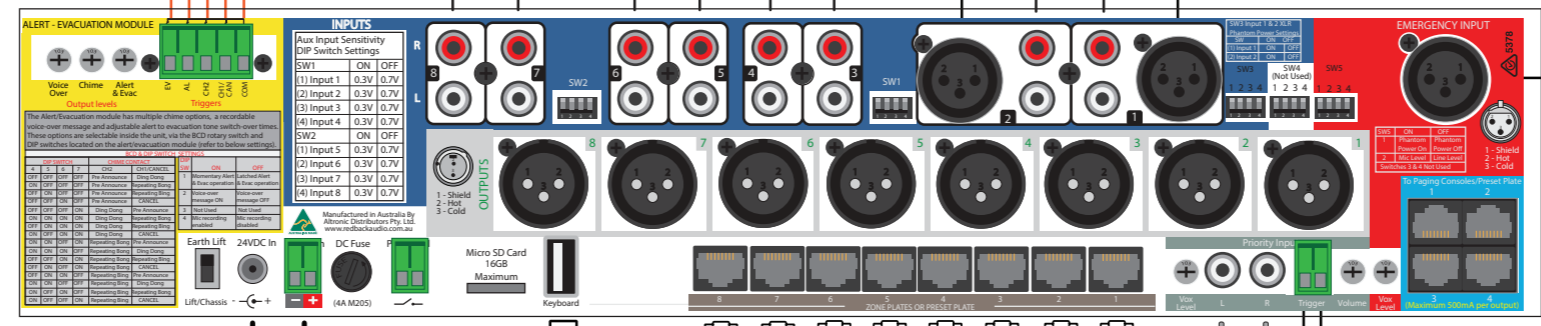

Evacuation tones can be triggered by closing contacts such as switches, from Fire Indicator Boards or the like.

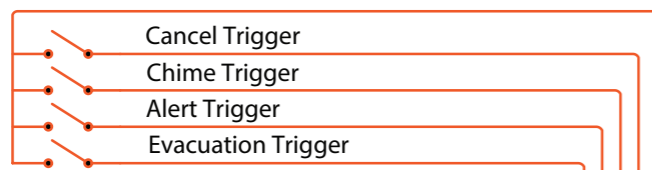


Local Emergency Paging Microphone

A 4476 Preset Wallplate (Can be connected to either paging console input or any zone plate input connector. Maximum of 1 preset plate per system)

24V DC 2A POWER SUPPLY

USB KEYBOARD (MUST BE PS2 COMPATIBLE SUCH AS ALTRONICS: D2111)

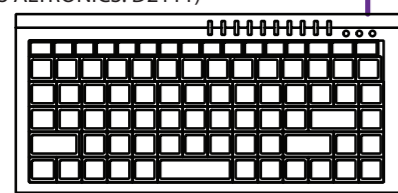


USB KEYBOARD FOR PROGRAMMING THE LABELS FOR THE TFT DISPLAY (CAN ALSO BE USED TO PROGRAM A 4481 PAGING CONSOLES)


A 4931 Local Mic/Line Input wallplate. (This is connected to the A 4493 zone selector plate to provide a local VOX operated mic or line input. Connection is via a CAT5e cable. Maximum of 1 per A 4493 plate)



CAT5 cable Max 100M

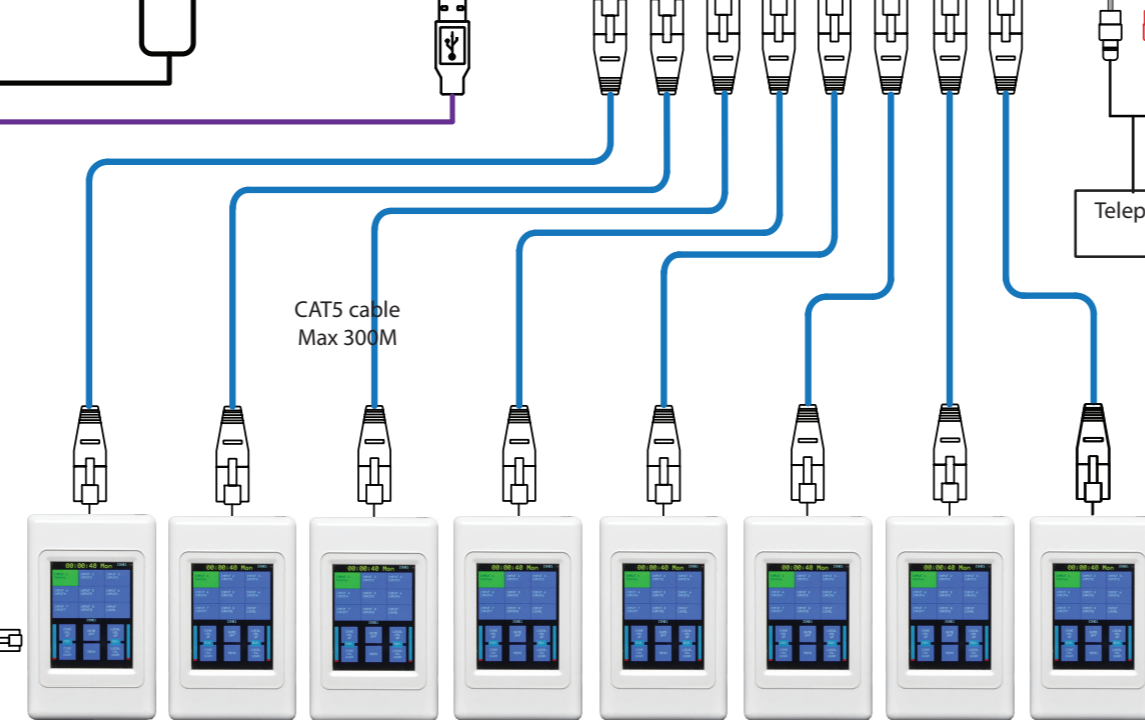

A 4493 Zone Selector Wallplates. Plate 1 must be connected to input 1. Plate 2 to input 2 etc. Zone plate ID number set by the user via the menu. Maximum of 1 zone plate per zone and a maximum of 8 plates per system.

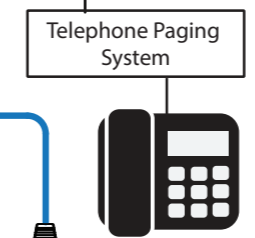



Telephone Paging System

CAT5 cable Max 300M



CAT5 cable Max 300M

CAT5 cable Max 300M


A 4481 Paging consoles. A maximum of 8 paging consoles can be connected in a Loop in/loop out configuration. A maximum of 2 consoles per output port on the A 4480B. Console ID set by dip switches on rear of console.

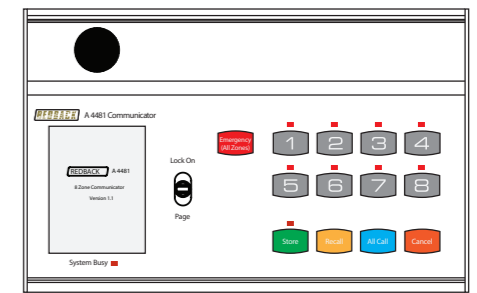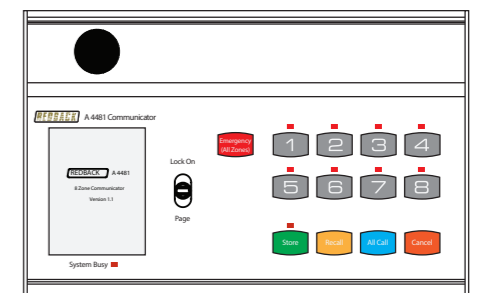

Redback® A 4480B 8 Input to 8 Output Audio Switcher - Connection Guide

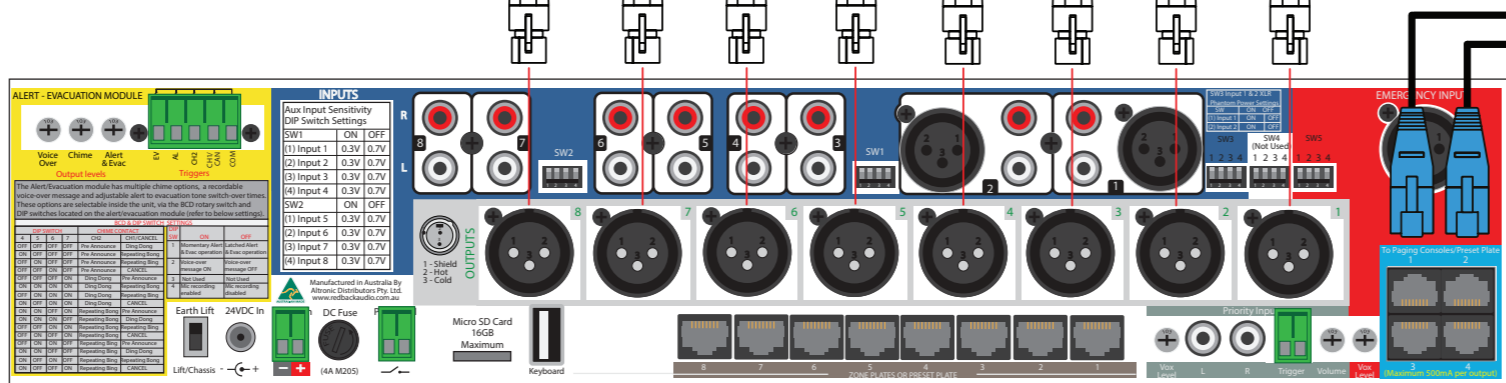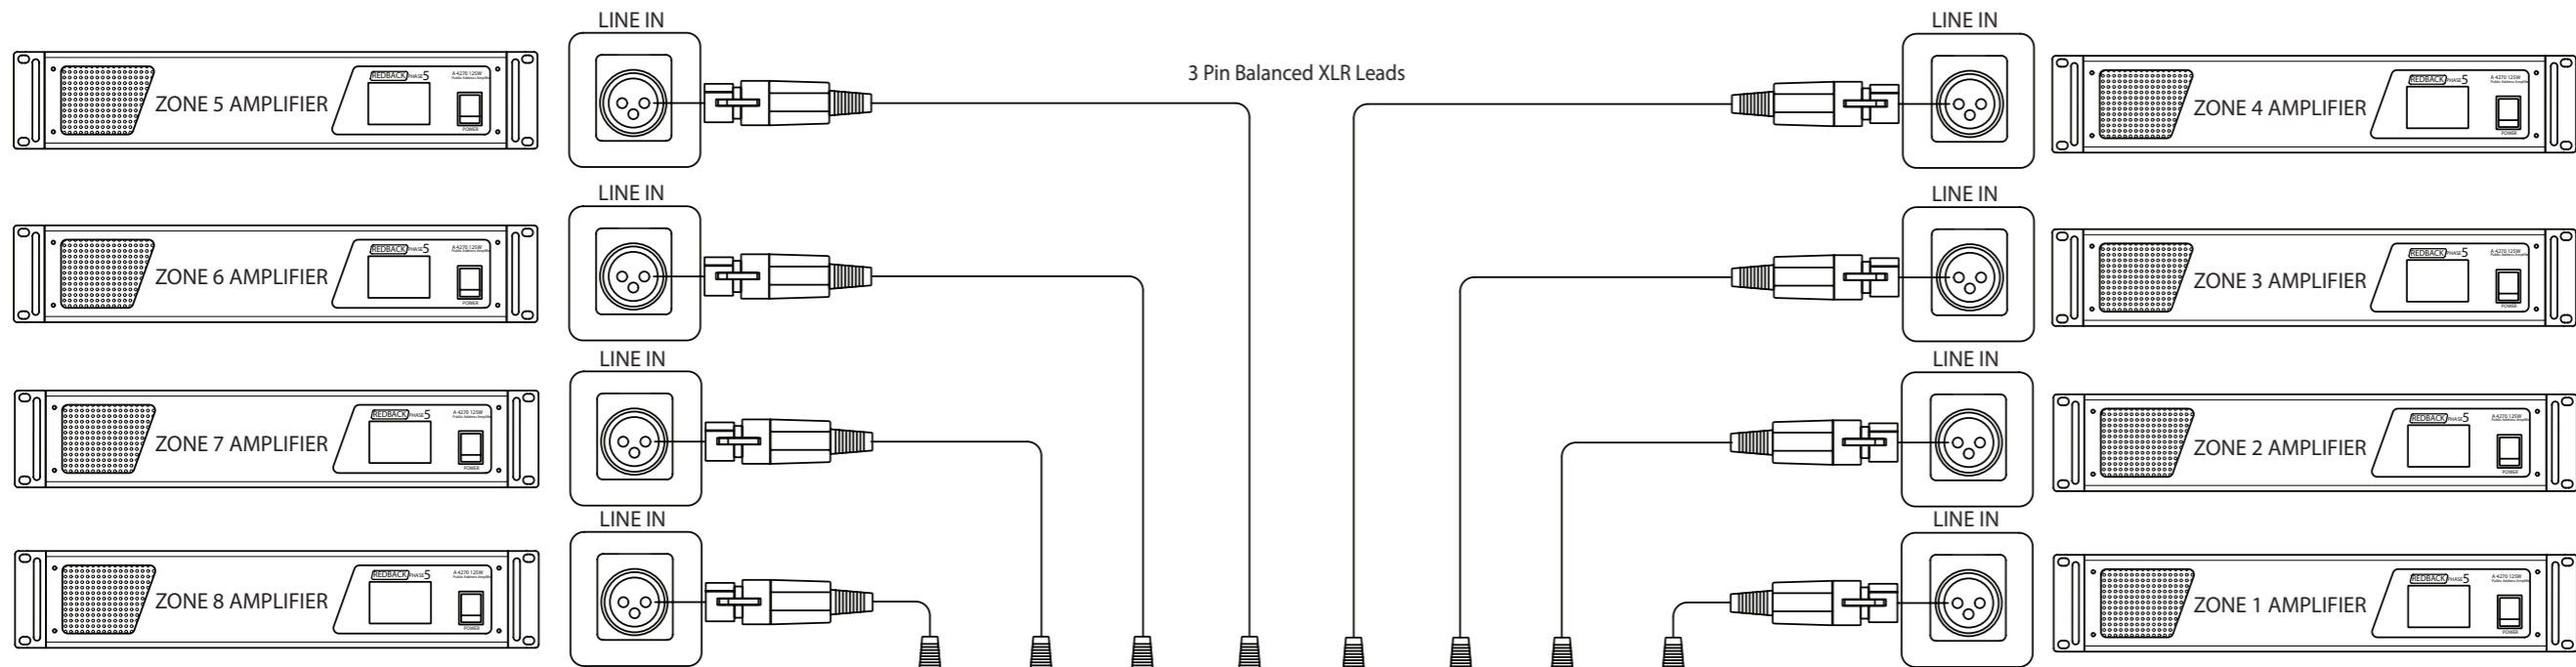

NOTE : MAXIMUM OF 2 PAGING CONSOLES PER OUTPUT PORT
The Maximum cable run for cascaded paging consoles is 300 metres total.

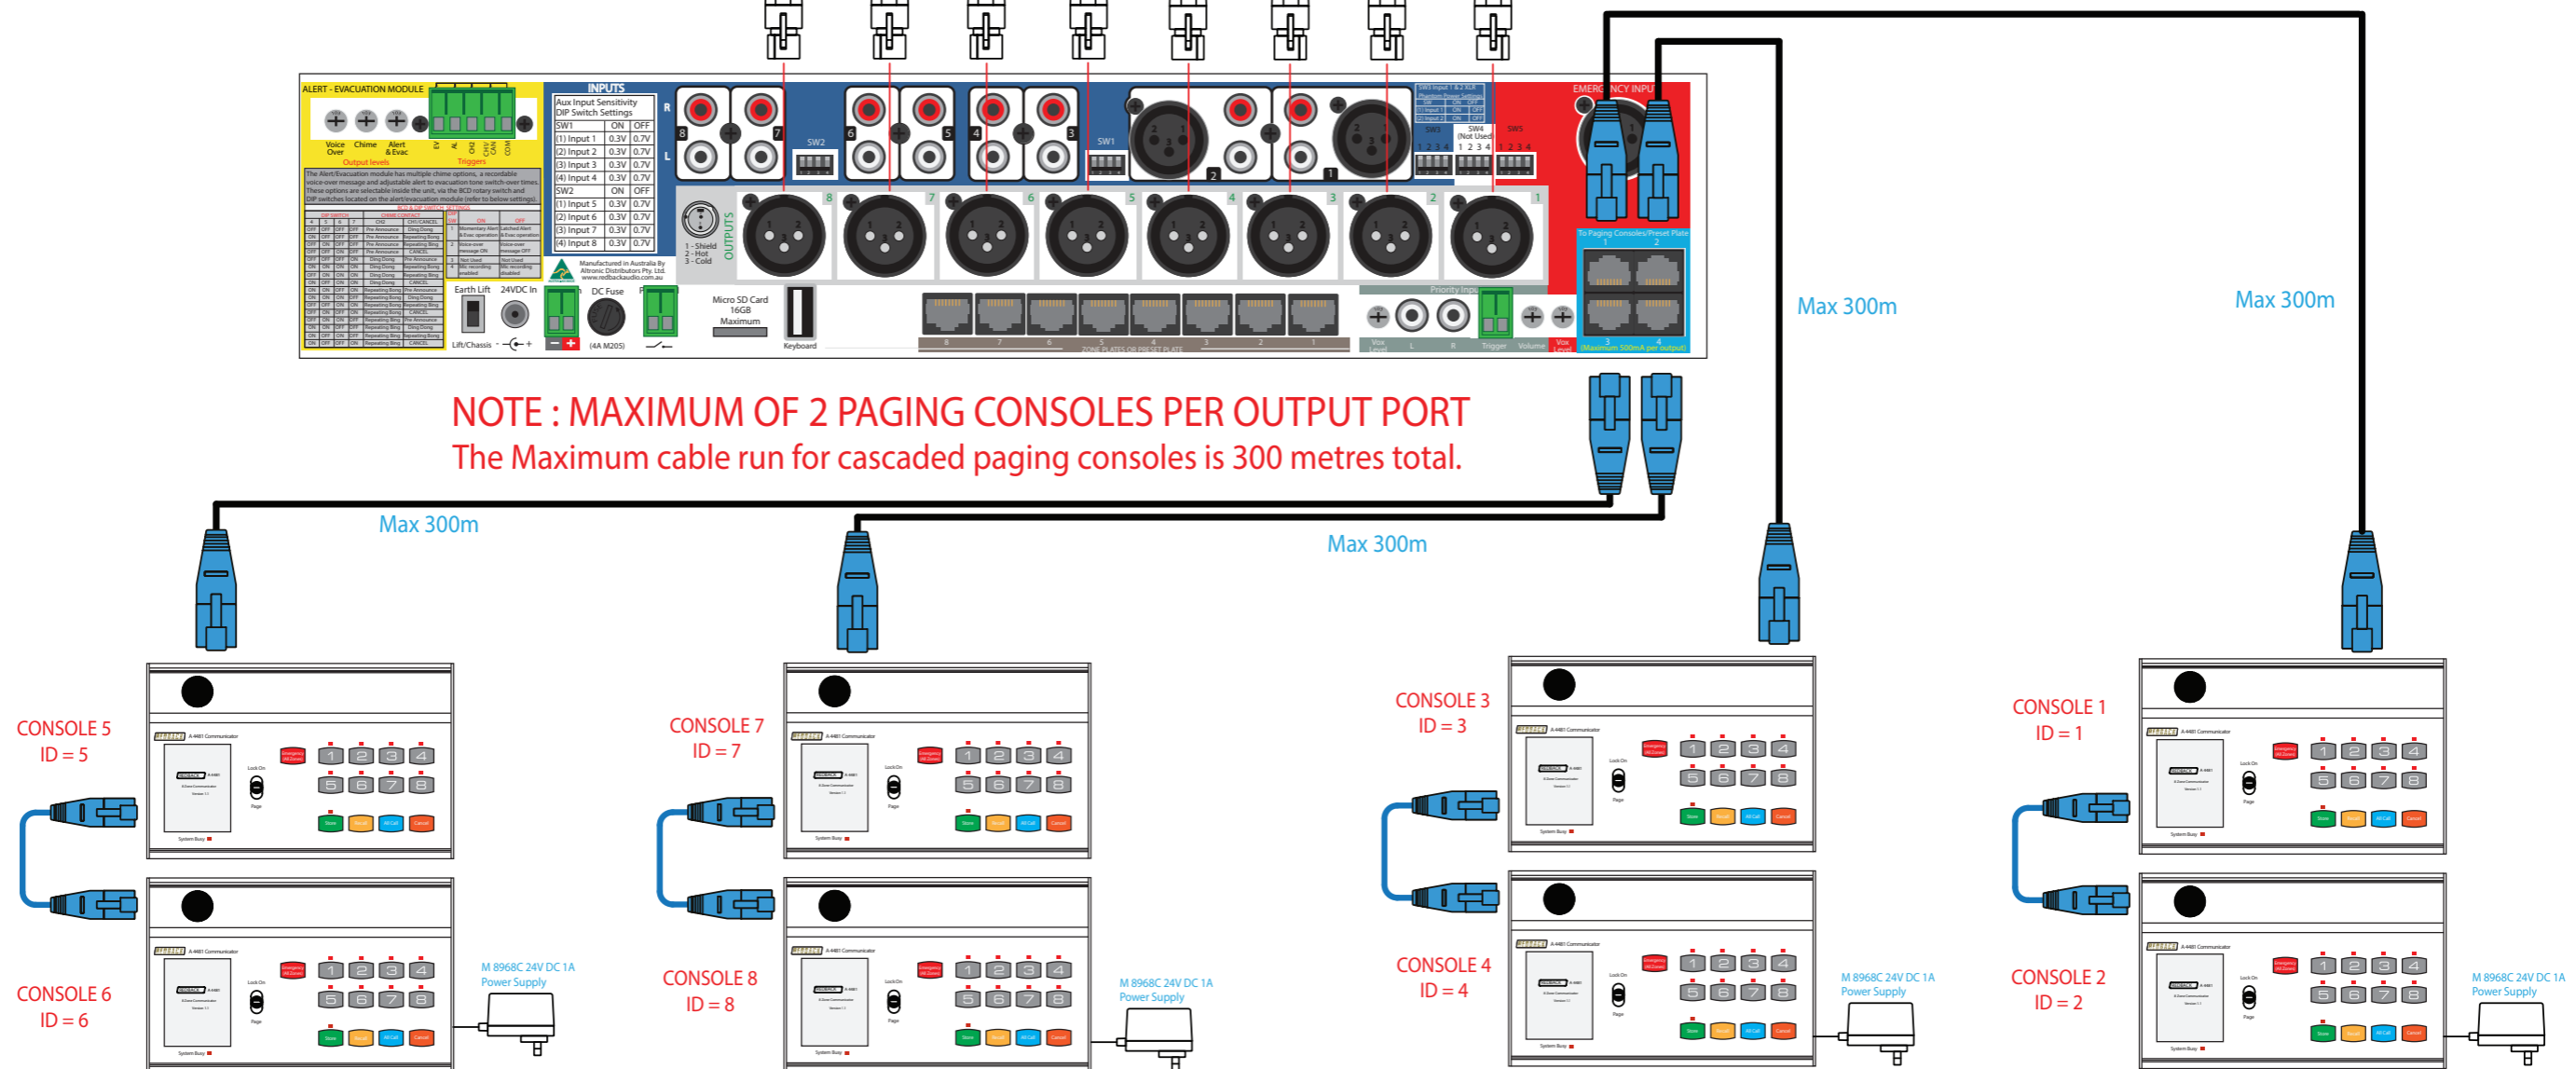

THIS FIGURE ILLUSTRATES HOW TO CONNECT THE MAXIMUM 8 PAGING CONSOLES IN A LOOP IN/LOOP OUT CONFIGURATION