

# CUSTOMER CLEANING & MAINTENANCE

## OF THE JKACSSFP MARINE GRADE STAINLESS STEEL PLATE

Stainless steel occasionally requires cleaning to remove dirt, grime & finger marks to keep in pristine condition. **Hard abrasives should NOT be used on the polished surface.**

### MATERIALS

- Clean, dust & dirt free cloths (soft cloth avoids scratching)
- 2 x mixing containers
- Gladwrap
- Washing up liquid
- Warm clean water

### CLEANING

- (a) With a soft cloth dip into warm water and squeeze out excess water.
- (b) Lightly wipe the Camera lens cover & Code Pad keys. Lightly wipe clean with a soft dry cloth.
- (c) Cover the Camera lens and Code Pad keys with small pieces of Gladwrap.
- (d) Mix a small amount of washing up liquid into warm water. Dip a soft cloth into the "soapy water", squeeze out excess. ( so liquid does not stain painted walls the plate is fixed to). Rub the plate all over until grime, dirt and "tea stains" have been removed.
- (e) Finish by wiping the plate with a damp cloth of warm water only.

**Note :** Discolouration or "Tea Staining" mostly occurs in coastal areas (up to 5 Km ) the closer to the sea front the worst the staining. Use your discretion how often cleaning is required. If Code Pad buttons become encrusted in salt at the sea front. Get a soft Paint Brush, dip brush in warm water with detergent (as above), wipe off excess and lightly dab The buttons until salt is removed and the buttons move freely.