Permaconn Keypad Interface for DSC Power Series

- Install the Keypad Interface.
- Setup the Keypad Interface.




Compatible with PM24 / PM45 v3 4G / PM1048 / PM54

The Keypad Interface allows the user on Pocket Secure Pro to:

- Select between two or more Partitions.
- Arm/Disarm/Stay on one or more Partitions.
- Bypass individual zone on one or more Partitions.
- Select Push notifications on Alarm, Operation and System Events.
- Arm/Disarm through keypad Interface, no keyswitch required.
- Disarm system with user code.
- Control the outputs on the Permaconn device.
- Map panel Users/Zones.
- Send location aware panic notifications.

Install the Keypad Interface

Wiring For DSC Power Series Keypad Interface

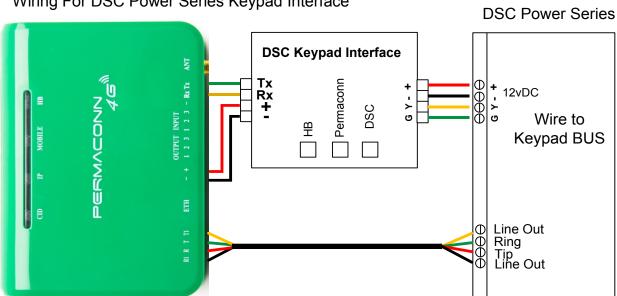

Keypad Interface LED's		
НВ	Flash	CPU 'OK'
Permaconn	Flash	Communication between Permaconn and Keypad interface 'OK'
DSC	Flash	Communication Keypad interface and DSC panel 'ok'

Enrol the Keypad Interface DSC Power Series

 
- * + 8 + Installer code (Enter program mode)
- * + 902 (Module Supervision Reset wait 1 minute)
- * + 903 (Module Supervision Field)
- ★ # + # (To exit program mode)

Setup the Keybus Interface.

How to activate the Keybus Interface online



1: Log onto Atlas select Fleet



2: Select Activate Tab




3: Select / Enter information then press Next

Permaconn Activation			
Serial Number:			
Central Station:			
Poll Plan:	<u> </u>		
Account Prefix:	▼		
Name:			
Traino.	Close NEXT		

Fill in the necessary information

4: Select / Enter information then press Activate

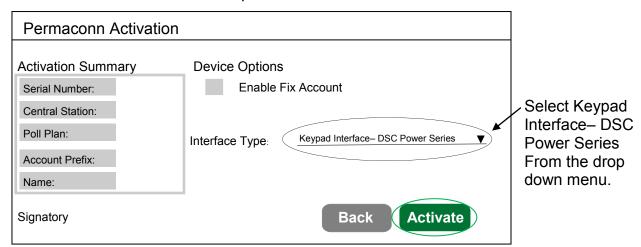

Successful install and setup shown below

